HOME
DECORATORS
COLLECTION

BF-24665 MSL SHALLOW CUBBIE CENTER

INV#04635

ASSEMBLY INSTRUCTIONS

Made In China

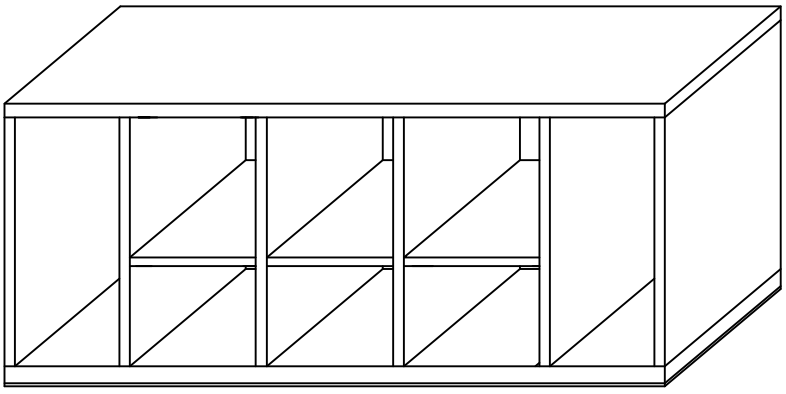

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all part are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE:

numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  BOTTOM PANEL-1PC	E  LEFT STAND PANEL-1PC	F  MIDDLE ACROSS PANEL-1PC
G  LEFT MIDDLE STAND PANEL-1PC	H  ACROSS PANELS-2PCS	I  BACK PANEL-1PC
J  CAM-BOLTS-8PCS	K CAM-LOCKS-8PCS	L 7mm× 5/8" SCREWS-18PCS

M  DOWELS-28PCS	N CAM-TOOL-1PC	O CAM-LOCKS CAPS-8PCS
P  RIGHT STAND PANEL-1PC	Q  RIGHT MIDDLE STAND PANEL-1PC	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

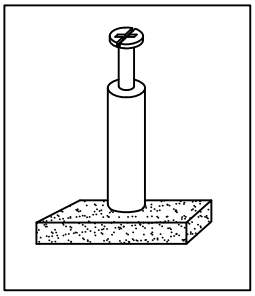

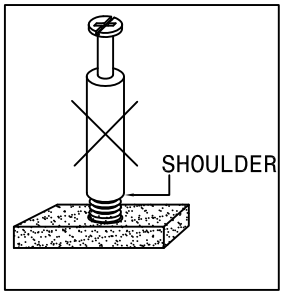

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

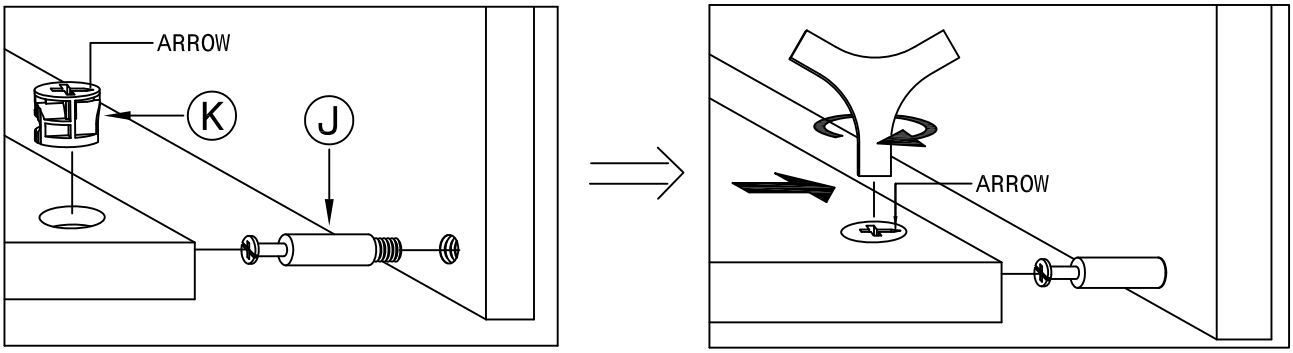

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

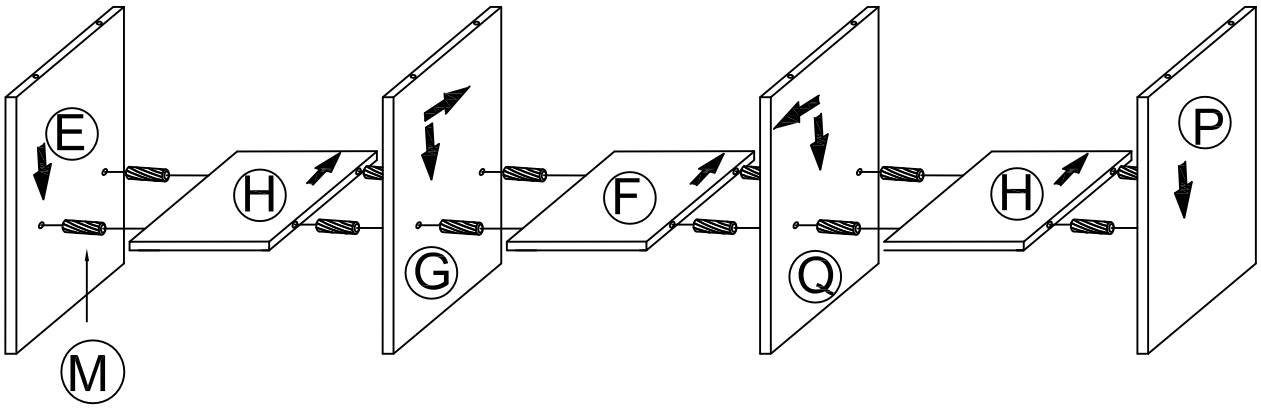

1). ASSEMBLE THE SIDE/ACROSS PANEL(E/F/G/H/P/Q).

- INSERT THE 12 DOWELS(M) INTO THE HOLES IN THE SIDE AND ACROSS PANEL(E/F/G/H/P/Q).

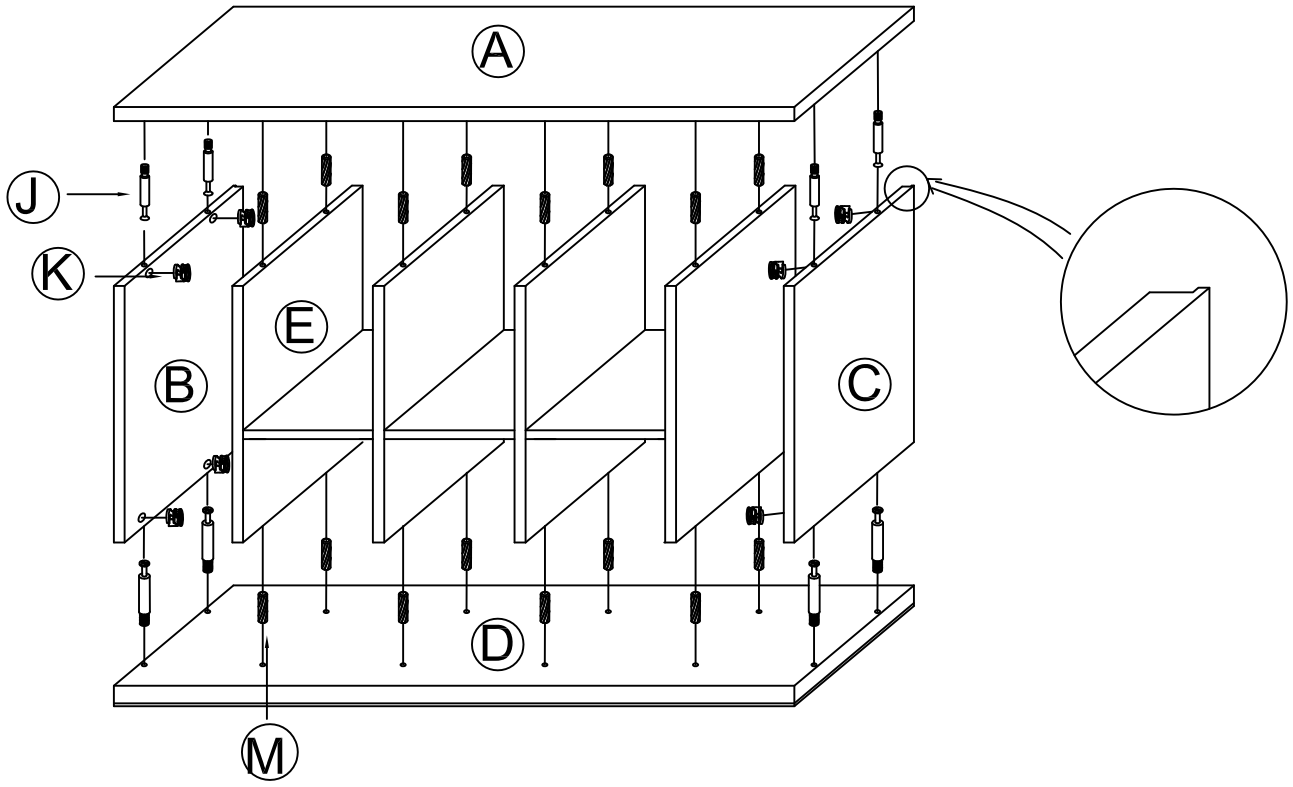

2). ASSEMBLE THE TOP/BOTTOM PANEL(A/D).

- ROTATE THE 8 CAM-BOLTS(J) AND INSERT THE 16 DOWELS(M) INTO THE HOLES IN THE TOP AND BOTTOM PANELS(A/D).
- PLACE THE CAM-BOLTS(J) INTO THE HOLES IN THE PANELS(B/C) AND ATTACH USING 8 CAM-LOCKS(K).

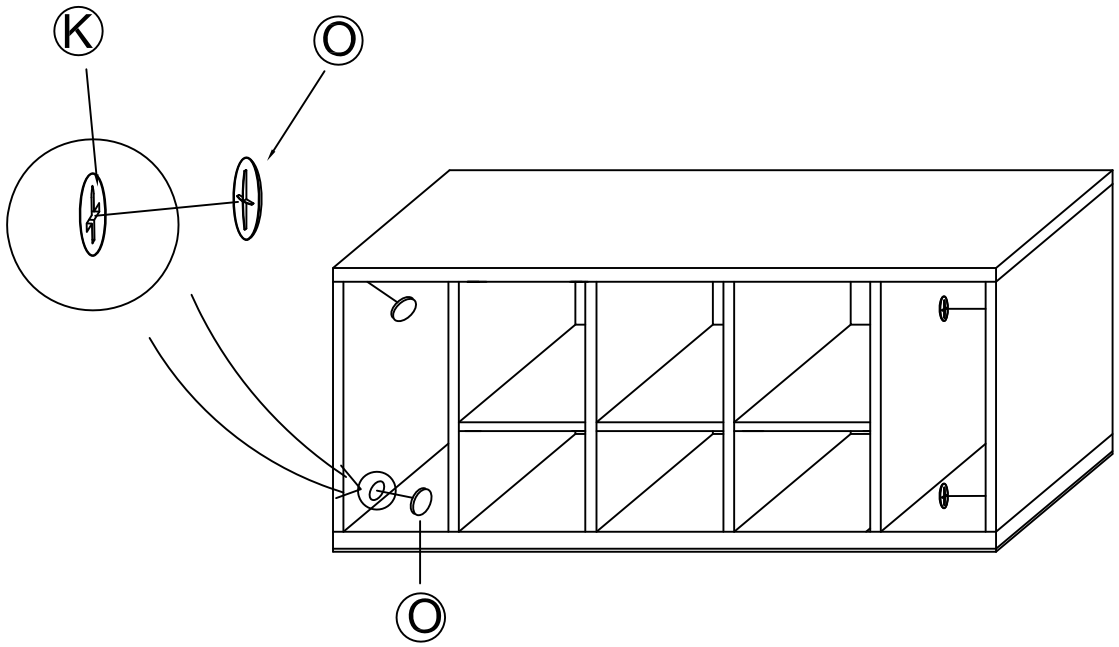

3). ASSEMBLE CAM-LOCKS CAP(O).

- ATTACH THE 8 CAM-LOCSK CAPS(O) ONTO THE 8 CAM-LOCKS(K).

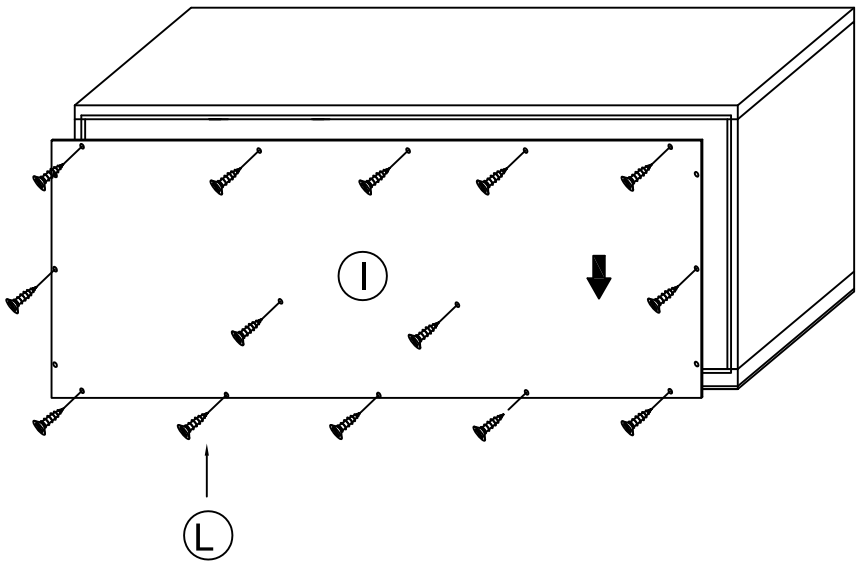

4). ASSEMBLE BACK PANEL(I).

- ATTACH BACK PANEL(I) USING 18 SCREWS(L).